

Specification Handleiding 600C

August 2023

Product: TFT LCD Display

APT Model: 600C

Client Model: R|A|T Holland

Client: www.rat-holland.nl

Client Check:

Supplier : APT(Tianjin) Development Co., Ltd.
1001, Building 5 HuaDing, No.1 HuaKe 3
Road, Binhai hi-tech Industrial
Development Zone, Tianjin, China
TEL: 86 22 26345859
FAX: 86 22 83719955

Email info@rat-holland.nl

Approval:

Content

1	Product model	3
2	Suppliers	3
3	Specifications	3
4	Dimensions and Material	3
5	Features	4
6	Main page	5
7	Functional Description	6
7.1	Power On/Off	6
7.2	Assist levels	6
7.3	Screen Switching	7
7.4	Headlight / Display Mode	7
7.5	Walking mode (6km)	7
7.6	Data cleanup	8
8	Menu Page	8
8.1	Display settings	8
8.1.1	Language	9
8.1.2	System	9
8.1.3	Brightness	9
8.1.4	Auto off	10
8.1.5	Scenes	10
8.1.6	Clock	11
8.1.7	Focus	11
8.2	E-bike Settings	12
8.2.1	Start password	12
8.2.2	Assist levels	13
8.2.3	Wheelsize	13
8.2.4	Battery voltage	13
8.2.5	Battery Indexes	14
8.2.6	Pow Indexes	14
8.2.7	Pow range	15
8.3	Advanced setting	15
8.3.1	Speed Limit	15
8.3.2	Current Limit	16
8.3.3	Start after poles	16
8.3.4	Poles In motor	16
8.3.5	Clockwise Start	17
8.3.6	Throttle 6km	17
8.3.7	Throttle Level	17
8.3.8	Start mode	18
8.4	Factory Setting	18
8.5	Information	18

8.5.1	Product Infor	19
8.5.2	Battery Infor	19
9	Errors code	19
10	Assembly instructions	20
11	Install and use precautions	20
12	Copyright Notice	21

1 Product model

Model: 600C

2 Suppliers

APT (Tianjin) Development Co., Ltd.

3 Specifications

- 2.4inch TFT screen(IPS 240*320 pixel)
- Battery supply:24V/36V/48V/52V
- Multi-language support(6 languages)
- Maximum output current to controller: 200mA, off-leakage current <5μA
- Operating temperature: -15~40℃, Storage temperature -20~50℃
- IP65
- EN 15194:2017
- RoHS

4 Dimensions and Material

Shell and bracket is made with ABS+PC, transparent window is made with PC.




5 Features

- **2.4inch TFT screen.**
- Ergonomic external button design, easy to operate, vibration function is provided during button operation.
- **6 languages:**
Czech, German, French, English, Italian, Spanish are supported.
- **Speed indicator:** Speed (Real-time), AVG Speed, MAX Speed.
- **Metric / Imperial.**
- **Smart battery indicator:** Capacity (percentage) or Voltage.
- **Mileage / Riding time indicator:** TRIPA&TIMEA (Data reset after shutdown), TRIPB&TIMEB(Data is saved after shutdown), Odometer, Range(if Battery supports).
- **Clock indicator:** Built in battery, clock keeps running when power off.
- **Brightness setting:** Day and Night Brightness can be set independent.
- **Assist Level:** 3-level/5-level/9-level /UBE optional.
- **Errors Code tips.**

- **6km walking.**
- **Firmware upgrade:** Upgrade the Logo individually.

6 Main page

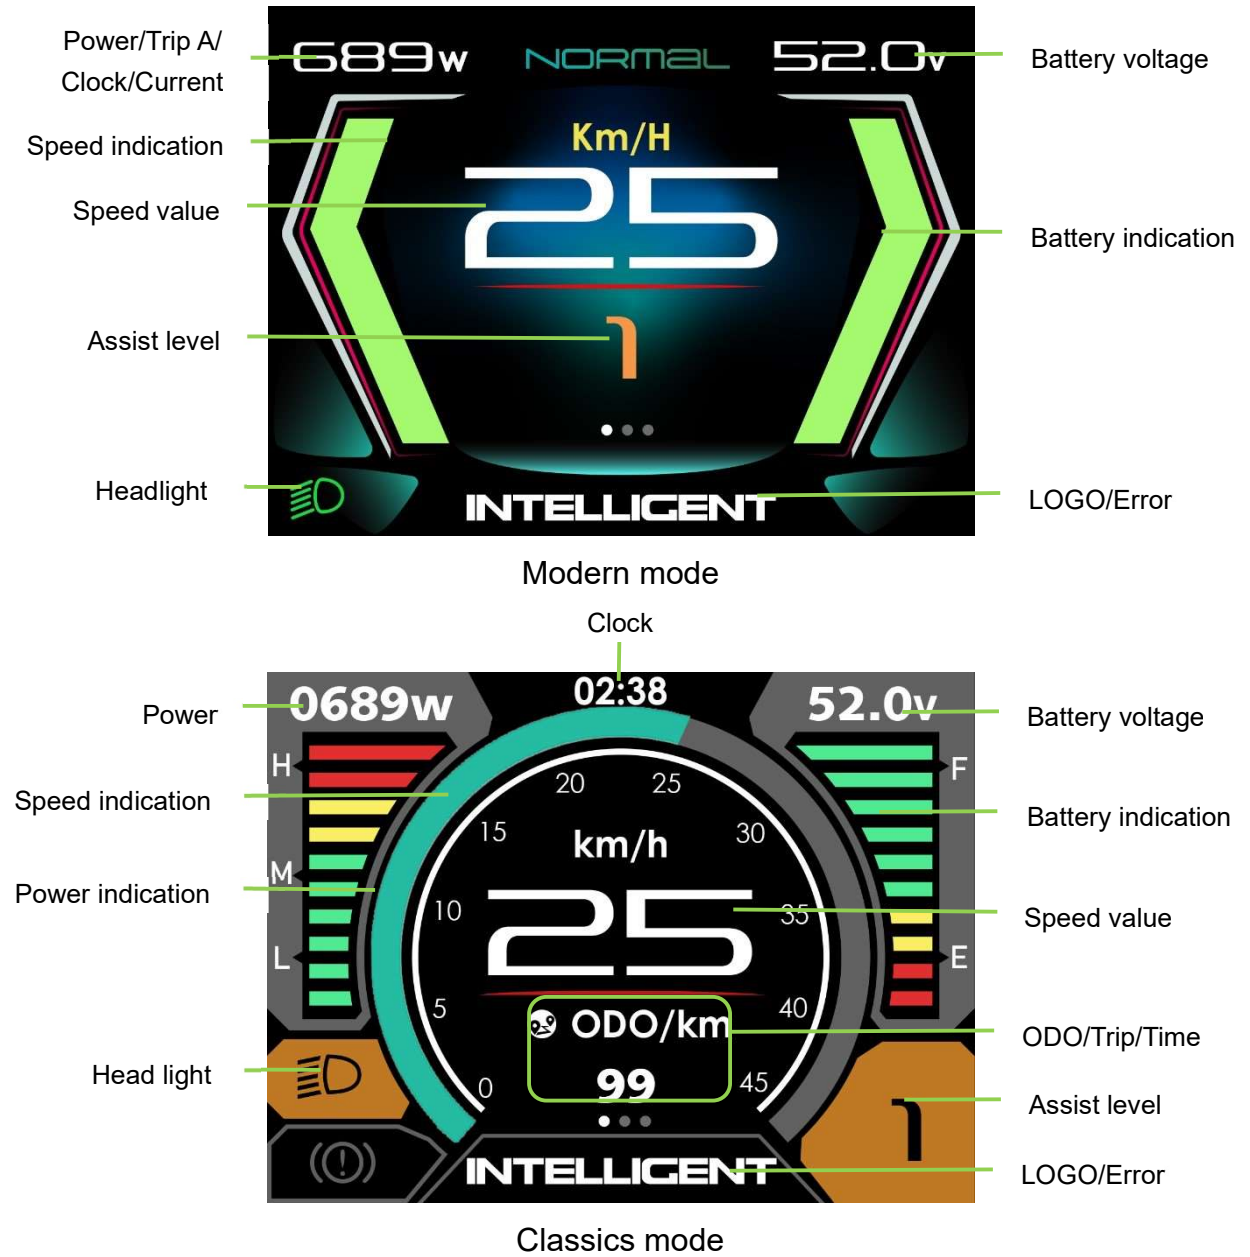

- **Clock:** 12h or 24h.
- **Head Light:** Head Light on/ off.
- **Mileage mode/Riding time:**
Modern page: TRIPA (Data reset after shutdown)

Classics page: TRIPA (Data reset after shutdown), TRIPB (Data is saved after shutdown), Odometer, Range(if Battery supports), TIMEA (Data reset after shutdown), TIMEB (Data is saved after shutdown).

- **Speed Value:** Real-time Speed, KM/H or MPH.
- **Speed indication:** When the speed limit is less than 40km/h, the maximum indicator is 45; when the speed limit is more than 40km/h, the maximum indicator is 90; if the real-time speed exceeds the maximum indicated, its display is not affected.
- **Smart battery Power indicator:** Provide a reliable battery Power indicator.
- **Assist level:** Displays the current assist level.
- **Error Code:** Show  when checking error.
- **LOGO.**

7 Functional Description



7.1 Power On/Off

Press **POWER** button for 2 seconds, you can turn on/off the display. The Display can automatically turn off when there is no operating and riding for 5 minutes. (The time can be set, refer to 8.1.4 'Auto off')

*Input pattern in first if pattern unlock was activated.

*Display will be locked for 30 seconds after 3 times failed attempt.

7.2 Assist levels

Press **UP/DOWN** button to change assist level. If the default setting is 5-level: Top assist level is 5, 0 for neutral. Level quantities can be adjusted according to the customer requirements.



7.3 Screen Switching

Press **POWER** button to switch the screen, including Main Page, Basic information Page and Information Page(The Main Page can be set, refer to 8.1.5 'Scenes').



Main Page –Modern mode



Main Page –Classics mode



Basic information Page



Information-1




Information-2 NOTE: Range will be

displayed if the battery supports communication.

7.4 Headlight / Display Mode

Press and hold **UP** button for 2 seconds can turn on/off headlight, display will switch to the corresponding mode (Day or Night).

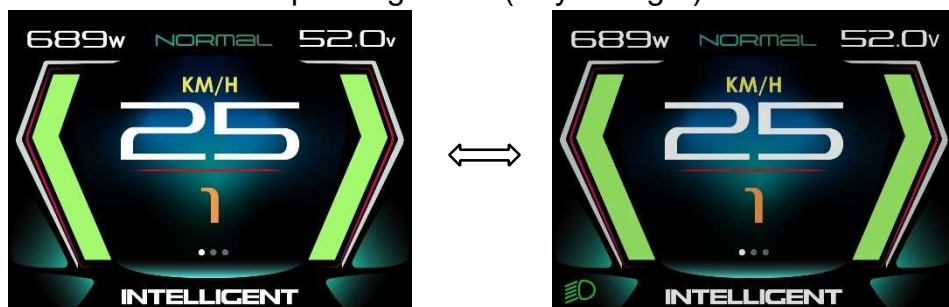

Day

Night

* The brightness of the Display can be set according to the user's needs, Refer 8.1.3 Brightness. * The motor does not work when the battery voltage is low, Display still can keep the headlight on for a while when E-bike is in riding.

7.5 Walking mode (6km)

Press and hold **DOWN** button for 2 seconds can get into walking mode, show 'P' and real-time speed on the screen, out of walking mode when releasing the button.



Walking Mode

7.6 Data cleanup

Press and hold **UP** & **DOWN** button together for 1 second can clean temporary data (TRIPB, TIMEA & TIMEB, AVG SPD, MAX SPD data).

- * Temporary data is automatically saved when power off. Abnormal power outage will cause data lost.
- * Restore Factory Mode (advanced settings in Menu Page) can clear temporary data (TRIPB, TIMEA, TIMEB, AVG SPD, MAX SPD, MENU settings) except ODO.
- * ODO will reset to zero over 99999. TRIPB will reset to zero over 9999.9.

8 Menu Page

Double press **MENU** button (press interval less than 0.3 second) can get into setting **UP/DOWN** menus, press **UP/DOWN** button to change the parameter **MENU** button can get into or save the settings. Select EXIT or press **MENU** setting, press **UP/DOWN** button twice to exit from menu.

- * Display will automatically quit menu if there is no operation for 30 seconds.
- * For safety reason, display will be locked on Main Page when riding (speed ≥ 2.0 km/h), function of MENU will be deactivated.
- * Display didn't save setting until click MENU to confirm.
- * Display doesn't quit parameter adjustment interface through pressing **MENU** button.


8.1 Display settings

Display settings include several items: Language, System, Brightness, Auto off, Scenes, Clock, Focus.




8.1.1 Language

6 languages are supported: Czech, German, French, English, Italian, Spanish. Default is English. Select language then click “Back” to confirm.

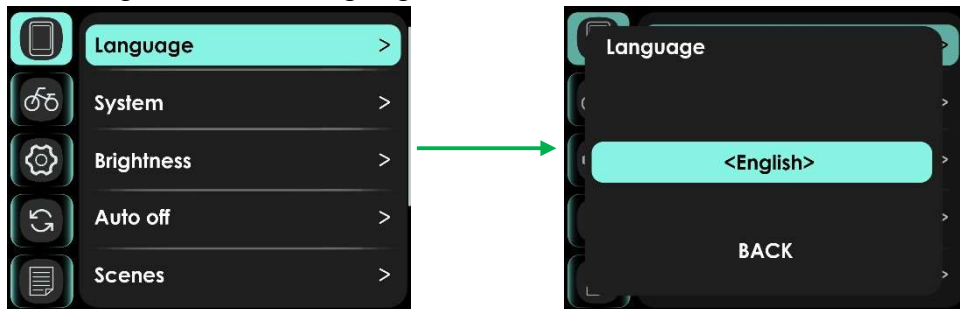


8.1.2 System

Select Metric or Imperial.

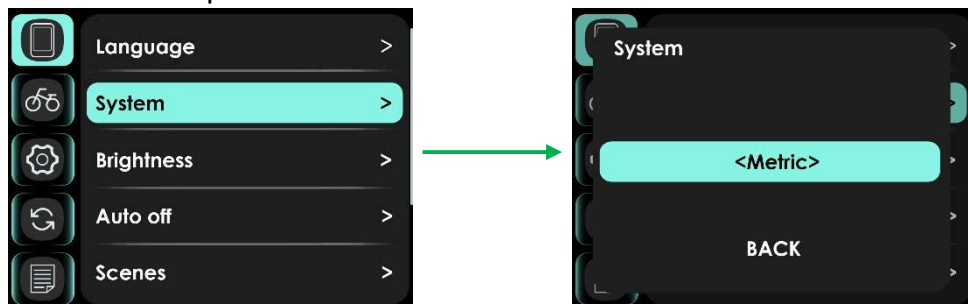


8.1.3 Brightness

You can set the backlight brightness in the light on and off state, press **UP/DOWN** button to change brightness of backlight, 1 is darkness, 5 is brightness.

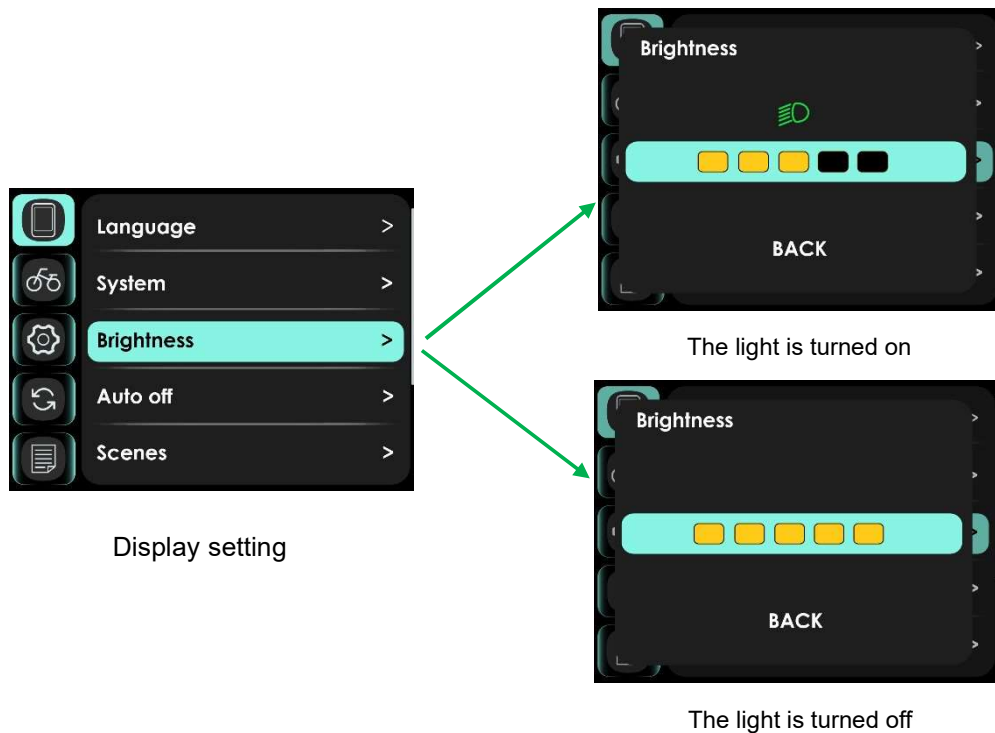


8.1.4 Auto off

This item enables to set the automatic shutdown time of the display, from 1 to 10min. Default value is 5 minutes, represents display shut down when there was no operation and riding for 5 minutes. OFF indicates that the display disables automatic shutdown.

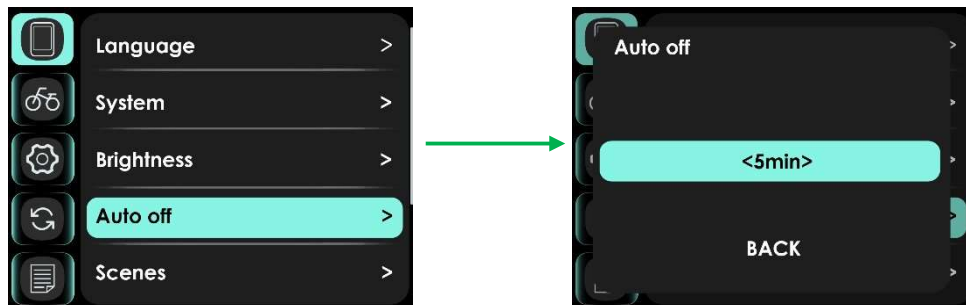


8.1.5 Scenes

Select Modern or Classics.

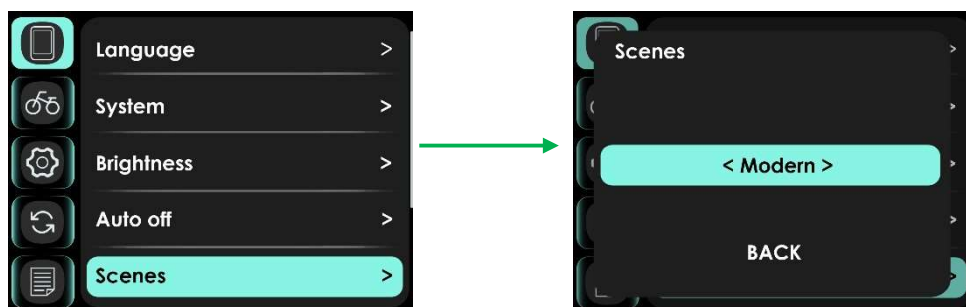

8.1.6 Clock

This item can set date and time. You can choose Show-12 hour, Show-24 hour on Main Page.

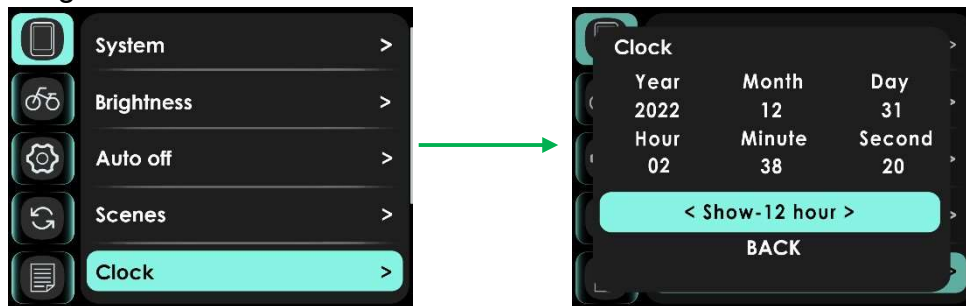

Show-12 hour




Show-24 hour


* Note: When display was powered off, internal Button Battery can keep clock running. When display is power on, Button Battery will be charged by external battery. If the display is not turned on for a long time, the Button Battery will drain (in winter or during long-distance transportation), Clock may slow or stop, please charge the battery as follows:

Set "Automatic shutdown" to "OFF" (Disable power off automatically), keep the display power on for 72 hours. Full charged Button Battery can keep clock running at least 3 months without charged.

8.1.7 Focus



6 Settings are supported: ODO, Trip A, Time A, Trip B, Time B and Range. The Settings are displayed on the Basic information screen and the Main screen.

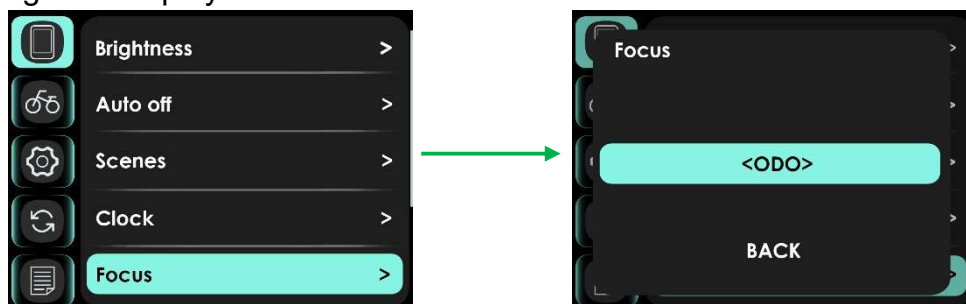

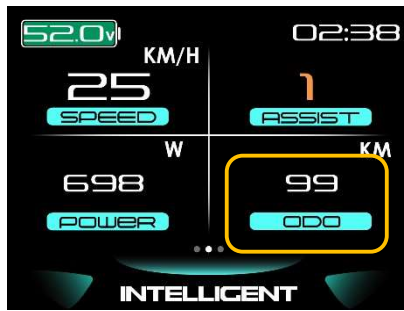

8.2 E-bike Settings


E-bike settings include several items: Start password, Assist levels, Wheelsize, Battery voltage, Battery Indexes, Pow Indexes, Pow range.

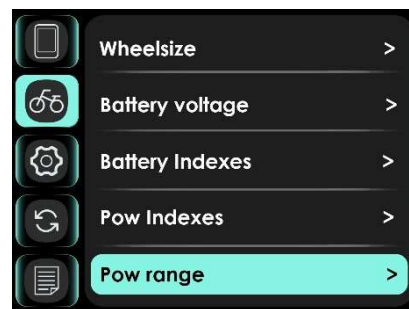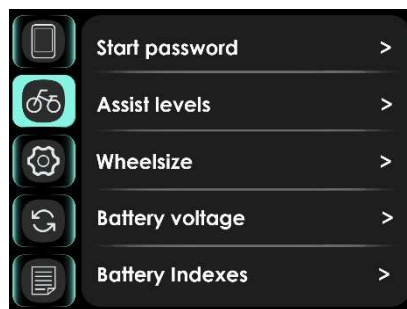

8.2.1 Start password

The start password includes two parameter settings, Start password, OFF/ON.

If you had set start password ON, you must input right password before power on.

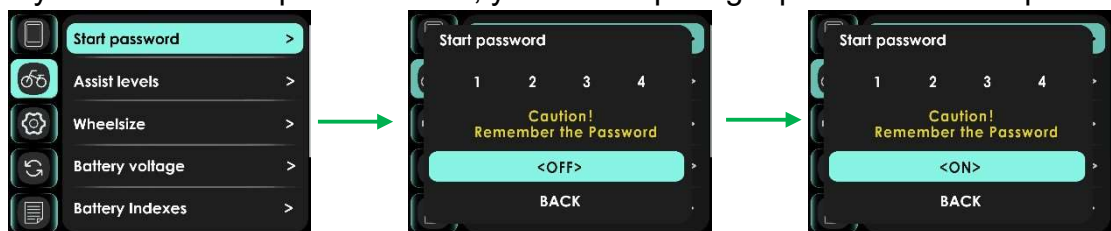

Turn on the start password function



Start password setting page

You need to input the right password before start with 30 seconds.




The boot page after setting the start password

- * Display will automatically shut down if the correct password is not entered within 30S. Press and hold **POWER** the button to shut down while entering the password.
- * Display will automatically shut down if the password was entered incorrectly 3 times.


8.2.2 Assist levels

This item can select assist levels, options are 3/5/9/U.

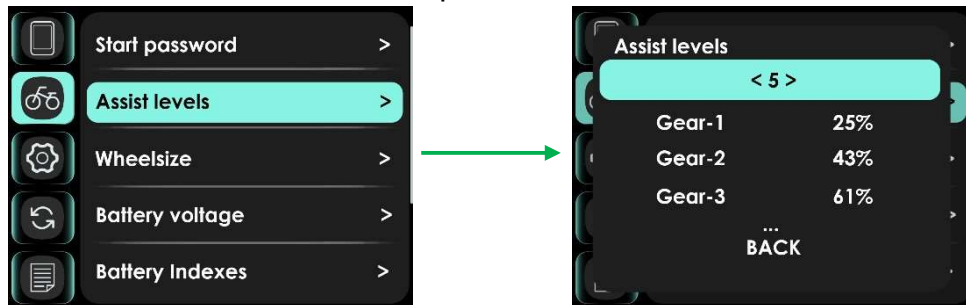


8.2.3 Wheelsize

This item can select wheel diameter, including 16/18/20/22/24/26/27/27.5/28/29 inch. Incorrect wheel diameter selection can lead to abnormal speeds.

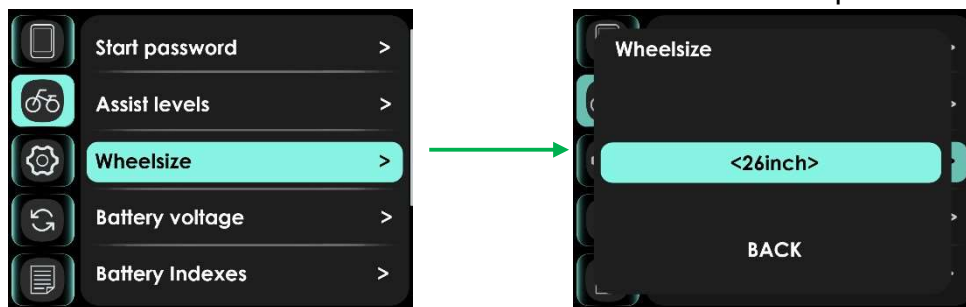


8.2.4 Battery voltage

The following voltage settings are supported: 24V/36V/48V/52V.

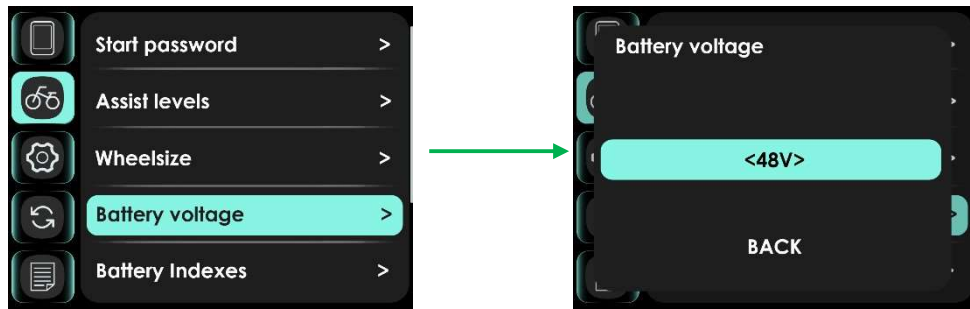

8.2.5 Battery Indexes

This item can select battery Indexes setting, including OFF, Percent, Voltage.

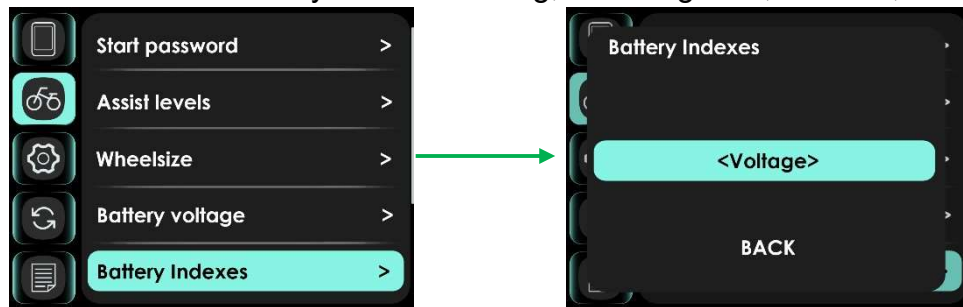

Voltage



Percent





OFF Note: The voltage is the

remaining voltage or percentage of the battery.

8.2.6 Pow Indexes

Main Page can be set to display Power(W) , Current(A), Trip A, Range, Clock.

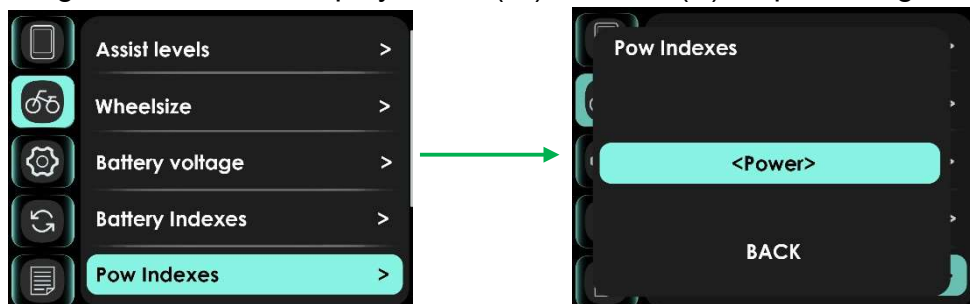


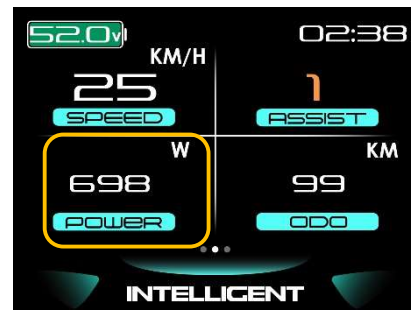

8.2.7 Pow range


Support Output power range Settings:

250W/500W/750W/1000W/1250W/1500W/1750W/2000W.

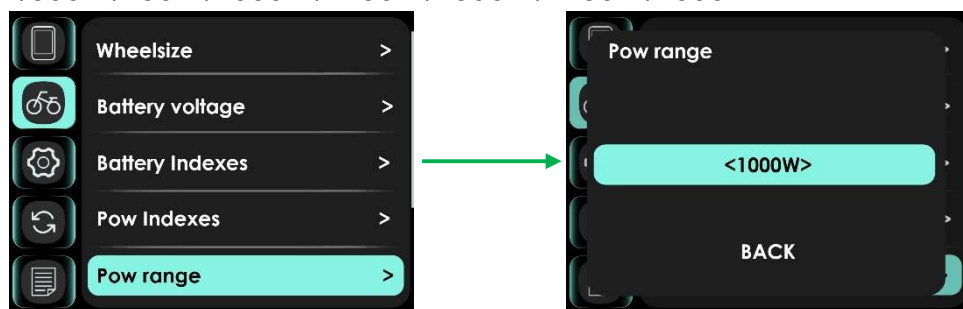


8.3 Advanced setting

Advanced settings have password to prevent illegal modification, default password is '1919', password may be different according to request.

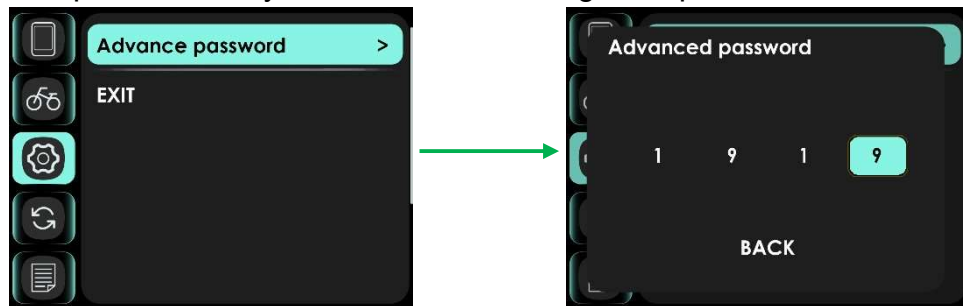


Advanced settings include Speed Limit, Current Limit, Poles In motor, Start after poles, Clockwise Start, Throttle 6km, Throttle Level, Start mode, and the error code messages of the last 10 times.

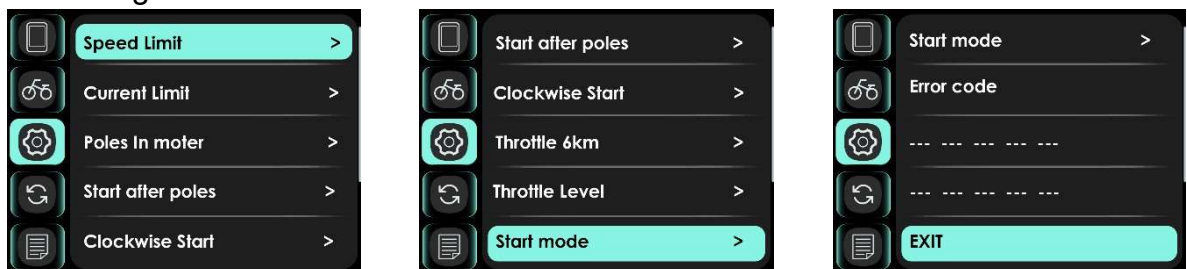

8.3.1 Speed Limit


Select range 10km/h ~ 41km/h (6.2Mile/h ~ 25.4Mile/h) .

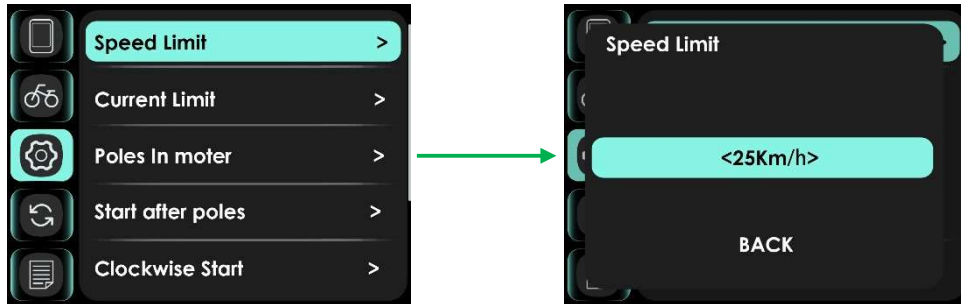

Note: The maximum speed is limited by the motor and controller, and it is not necessarily possible to reach the speed limit setting value.


8.3.2 Current Limit

Select range 0~25A.

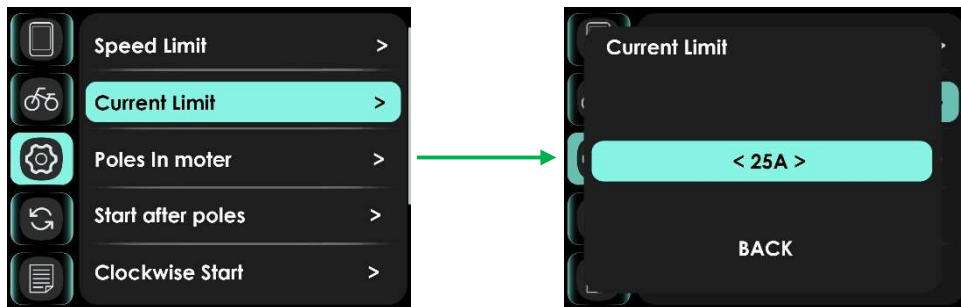


8.3.3 Poles In motor

Magnetic poles inside the motor, select range 1~15.

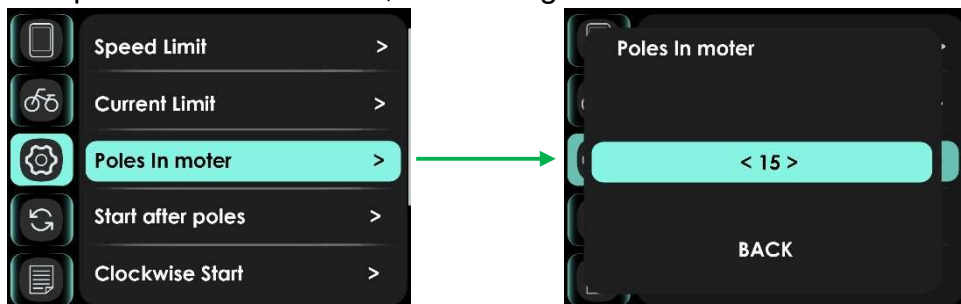


8.3.4 Start after poles

How many poles (speed sensor) need to be detected by controller before starting motor, select range 2~63.

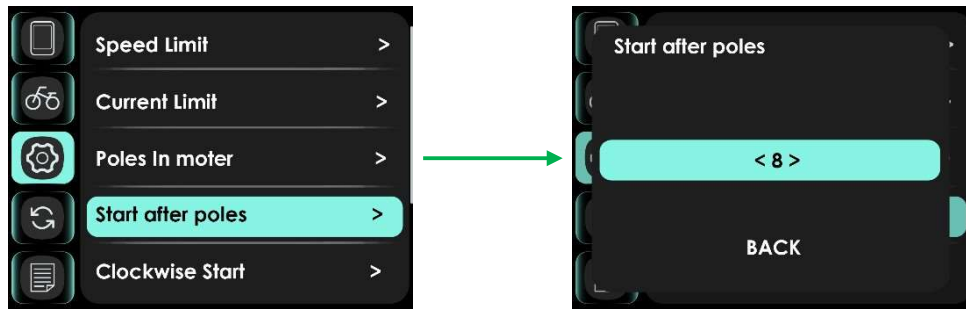


8.3.5 Clockwise Start

This parameter represent speed sensor turn direction, support front or reverse.

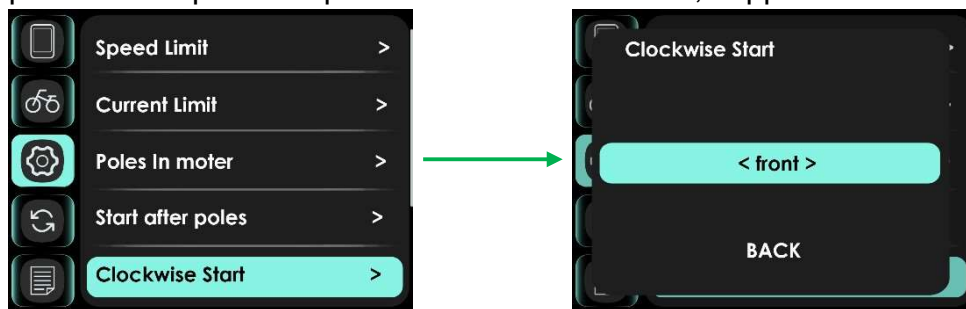


8.3.6 Throttle 6km

Support OFF or ON, OFF represents max speed, ON represents 6Km.

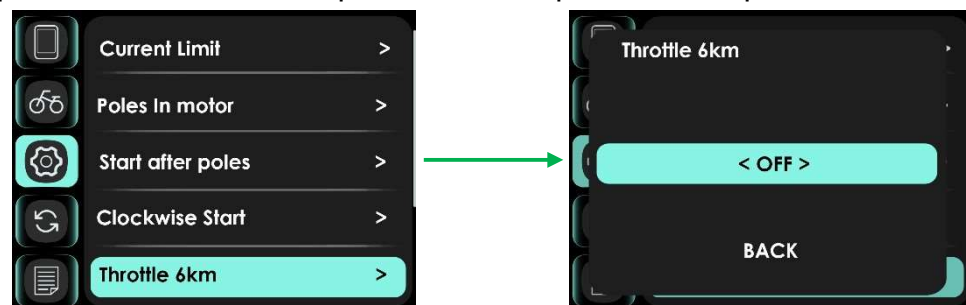


8.3.7 Throttle Level

This parameter is functional when Throttle 6KM set OFF. Support OFF or ON, OFF represent throttle start max speed, ON represent throttle's speed is accorded to the assist level.

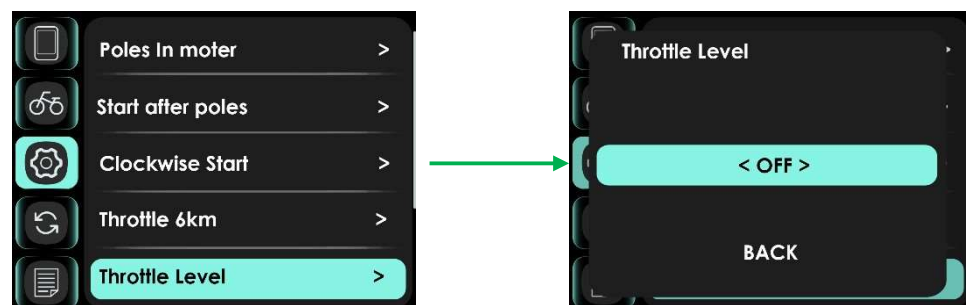


8.3.8 Start mode

Support three modes of STD/Eco/Pow. Pow mode means use maximum current when speed up, Eco mode means use minimum current.

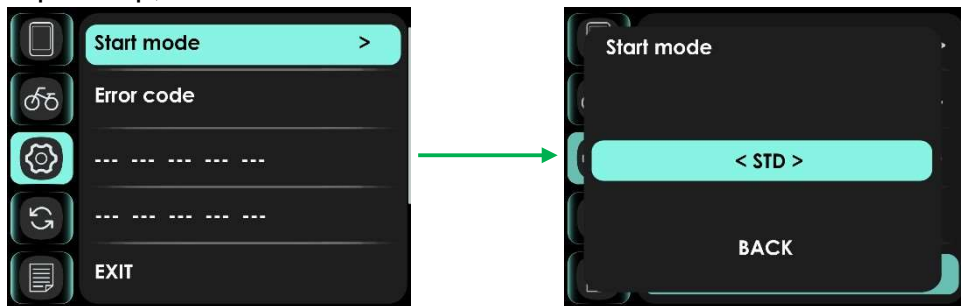

8.4 Factory Setting

Select 'YES' will restore all setting to factory defaults.

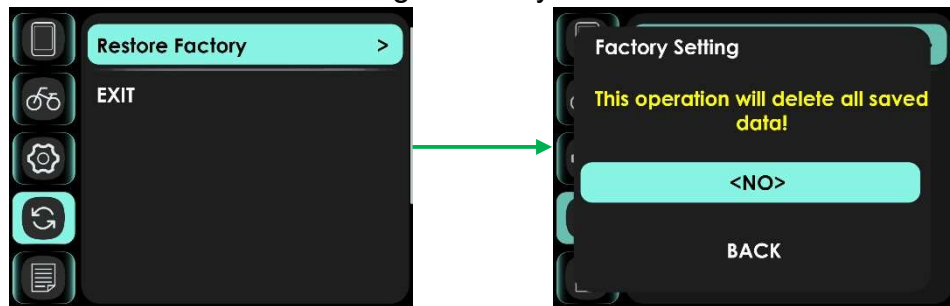

Note: ODO and CLOCK data are not cleared.

8.5 Information


The information display interface includes: Speed and Mileage Information, Product Information, Battery Information.



NOTE: Range will be displayed if the battery supports communication.


8.5.1 Product Infor

Product Information show Hardware Version, Software Version, Date...

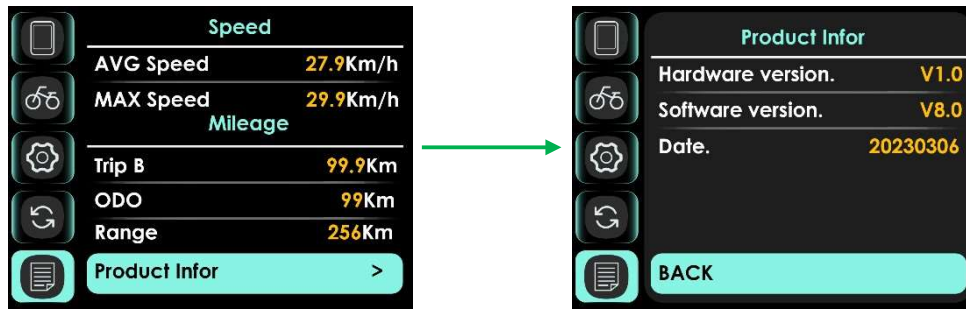

8.5.2 Battery Infor

Battery Information can show Voltage, Capacity, Cycle times, Current, Last Uncharge Times, Temperature, Remaining Capacity, Full Charge Capacity, Max Uncharge Times.

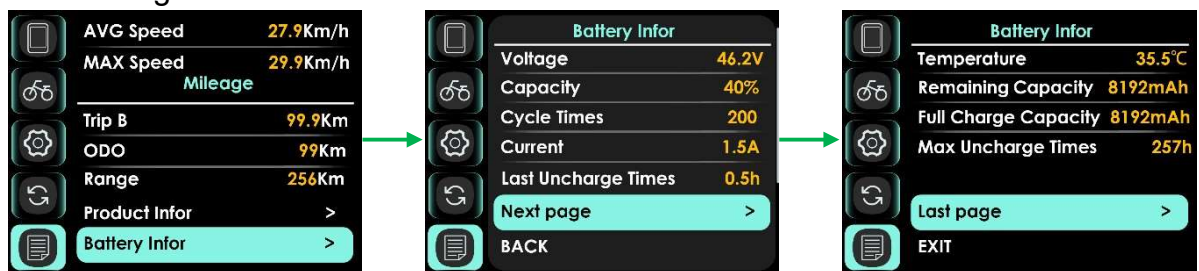

The battery information will be displayed if the battery supports communication.

9 Errors code

Display shows error code and  at the bottom of the screen when system checked abnormal.



Error code prompt page


Error Code	Error description	Handle
21	Current abnormality	Check the controller
22	Throttle error	Check throttle and connection
23	three-phase power error	Check three-phase power line connection
24	Hall sensor error	Check the hall connection
25	Brake error	Check the brake connection

30	Communication Error	Check the cable connection
----	---------------------	----------------------------

10 Assembly instructions


Please pay attention to the torque value, exceeding the maximum torque can damage the part.

Electrical or pneumatic tools is not recommended.

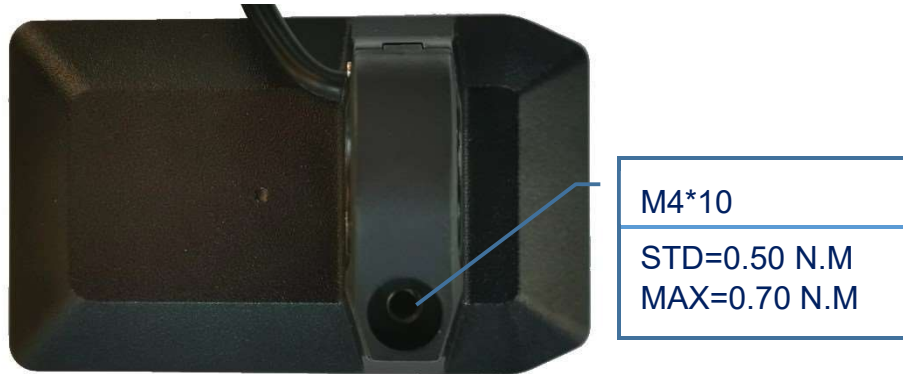

11 Install and use precautions

Do not adjust viewing angle before loose the screws.

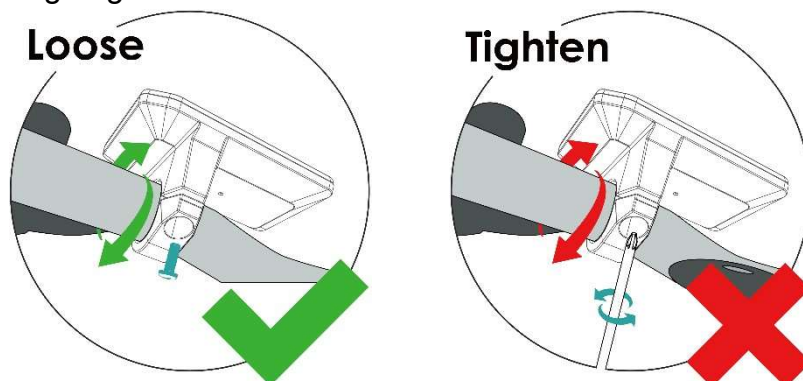

12 Copyright Notice

Questions about your e-bike, please contact with dealer firstly.

APT reserves the right to modify this specification file, without declaration in advance.

Content and Image owner : APT (Tianjin) Development Co., Ltd.

1001, Building 5 HuaDing, No.1 HuaKe 3 Road, Binhai hi-tech Industrial Development Zone, Tianjin, China website : www.aptdvelop.com

